

## www.cablematic.com

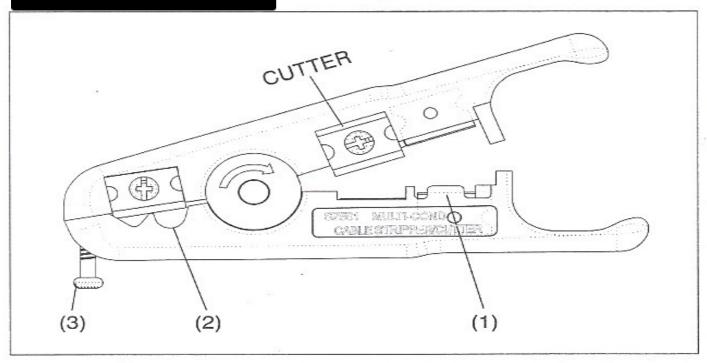

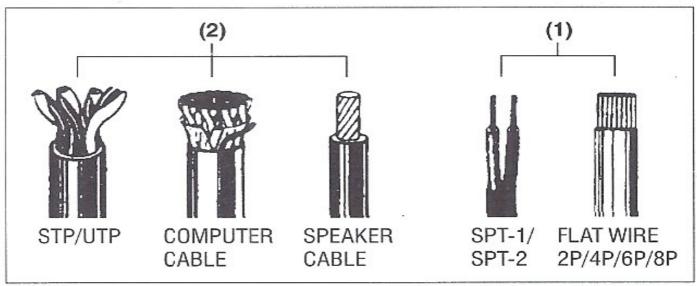

## Instructions

- Flat Wire Stripper, by inserting cable between the stripper blades. Squeeze handles, cable must be keep perpendicular and then pull from the tool. Available for following cables:
  - Stranded phone wire 2P, 4P, 6P, 8P, 10P, etc.
  - Intercom/Alarm wire/2-Cond. Speaker wire 18-22AWG and SPT-1 Electric wire
- Round Cable Stripper, by rotating 1-3 times at counterclockwise, and then open the jaw and remove the outer jacket. Available for following cables:
  - Round cable: Tough insulation 12-14-16 AWG cable, SPT-2 electric wire.
  - Assorted solid modular wire: UTP, STP, Data Communication wire and Network cable.
  - Multi-Conductor cable: Insulation O.D. 3.2mm to 9.5mm (1/8"-3/8")
  - Automative/Heavy-duty wire max. 8 AWG.
- 3. Adjusting Bolt control for different cable sizes.